

**KBK-160. KBK-60. KBKN-160. KBKND-160. KBR-160.  
KBKS-160. KBKS-60. KBKNS-60. KBKNDS-160. KBRS-160.**

## **Installation and operating instructions OI-206521-1**

1. Place the cold well on a level surface. Avoid the influence of direct sunlight or other heat sources. Be aware of that ventilation blowouts can affect the temperature in the well.
2. Adjust level with the adjustment screws on the legs. If there are wheels, this must be locked.
3. If the cold well is a drop-in/inset unit, this must be secured in the top plate in a suitable manner. Please note the development of heat from the refrigeration unit, proper ventilation is very important! Enclosed ventilation grilles shall be mounted in the front cover/cladding. Please contact your dealer or manufacturer for further references.
4. Remove all protective plastic from all surfaces, inside and outside.
5. Insert the plug into an easily accessible 230 V/ 10 A **grounded** sockets, which is also easily accessible after assembly.
6. Start cooling by pressing green master switch to start unit. Let cooling go to set temperature before refrigerated goods/merchandise can be loaded in. Set temperature can be adjusted by pressing up arrow or down arrow key, for higher or lower temperature. Any other adjustment to the thermostat parameters must only be performed by qualified personnel.
7. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
8. There must be installed a door or a hatch in the covering so that there is access to plumbing, cooling machine and the electrical system.
9. Climate Class: This product is designed for climate class 3, which means that it is intended for use in temperature 25<sup>o</sup> C and 60 % humidity. During periods of high humidity, some condensation must be expected.
10. If the product should be connected to central cooling, it has to be performed by qualified personnel.
11. **Cleaning:** Clean the well inside with mild soap and water. Do not use soap with abrasives, chlorine, iodine or fluorine.  
**NB! Never use high-pressure water or water hose to clean the refrigerated well.**
12. Cleaning of the condenser is very **important!**  
This is what to do: Turn main switch in off position, open door under operating panel. Remove dust with a brush or vacuum cleaner from the condenser. If there is lot of fat this can be removed with a fat soluble detergent. Avoid unnecessary mess. Do this operation every other month, or more often, according to need. In some dining places with a lot of dust there has been a problem with much dust further inside the condenser.
13. Only qualified personnel or service agents are allowed to replace the supply line, if this becomes damaged.
14. If the luminaire light must be replaced, it has to be replaced with corresponding fixture.



**RUSTFRIE BERGH AS**